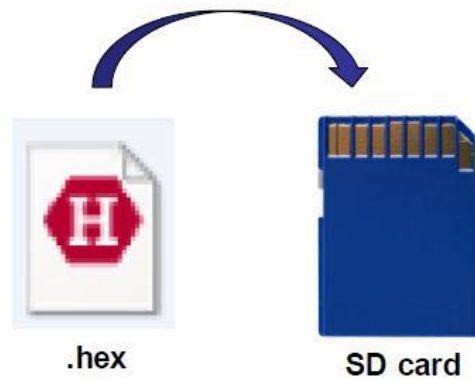1) Format SD Card
2) Insert Hex file into SD card
* SD card must have only one hex file.
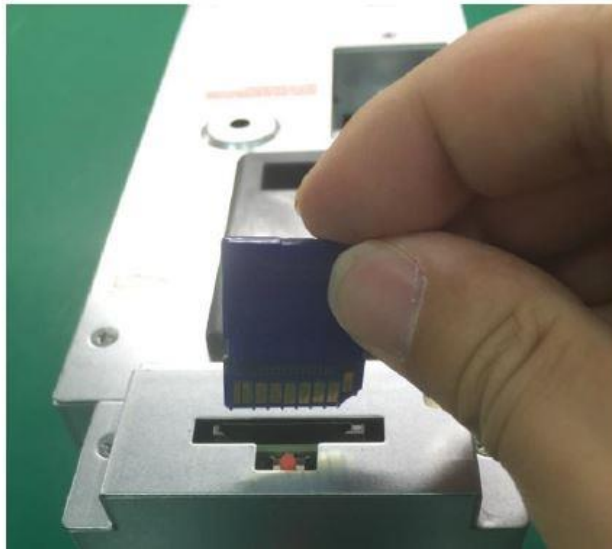
.hex

SD card

* SD card must be formatted in FAT16/FAT32 format.

Step 1. Open Top cover.

Step 2. Insert SD card

 : You should insert SD card as shown below until the insertion sound are heard

Step 3. CB On

Step 4. Push Update start switch

Push red button for about 1~2 seconds

Step 5. Update

1. LED light on as shown below during S/W update.
2. S/W restart after S/W update